


WARREN FW-30 Lifting Fifth Wheel

List of Authorized Replacement Parts

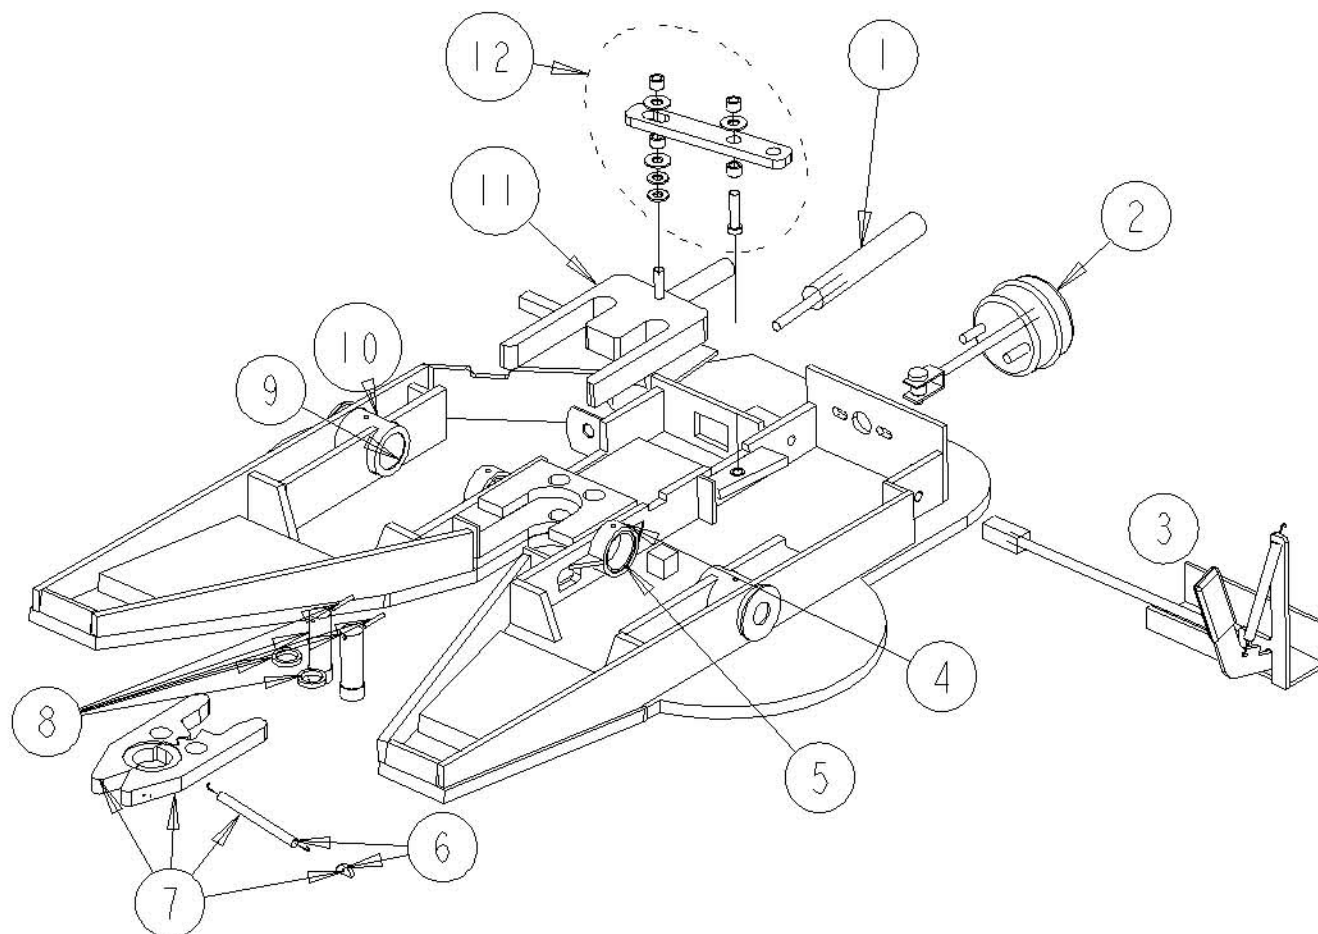


| Drawing Number | Description | Part Number |
|----------------|--|-------------|
| 1 | Air Locking Cylinder with Nut | 600-60001 |
| 2 | Warren Air Chamber— DO NOT SUBSTITUTE WITH ANY OTHER TYPE | 600-60002 |
| 3 | Road Lock Repair Kit | 600-60003 |
| 4 | 1" Top Plate Bearing Housing | 600-60004 |
| 5 | 1" Connex Top Plate Bearing | 600-60005 |
| 6 | Jaw Spring | 600-60006 |
| 7 | Jaw Pair with Spring and Hook | 600-60007 |
| 8 | Jaw pin with Cotter Pin (2 required) | 600-60008 |
| 9 | 3-3/8" Top Plate Bearing Housing | 600-60009 |
| 10 | 3-3/8" Connex Top Plate Bearing | 600-60010 |
| 11 | Jaw Fork | 600-60011 |
| 12 | Locking Linkage | 600-60012 |



WARREN FW-30 Lifting Fifth Wheel

List of Authorized Replacement Parts

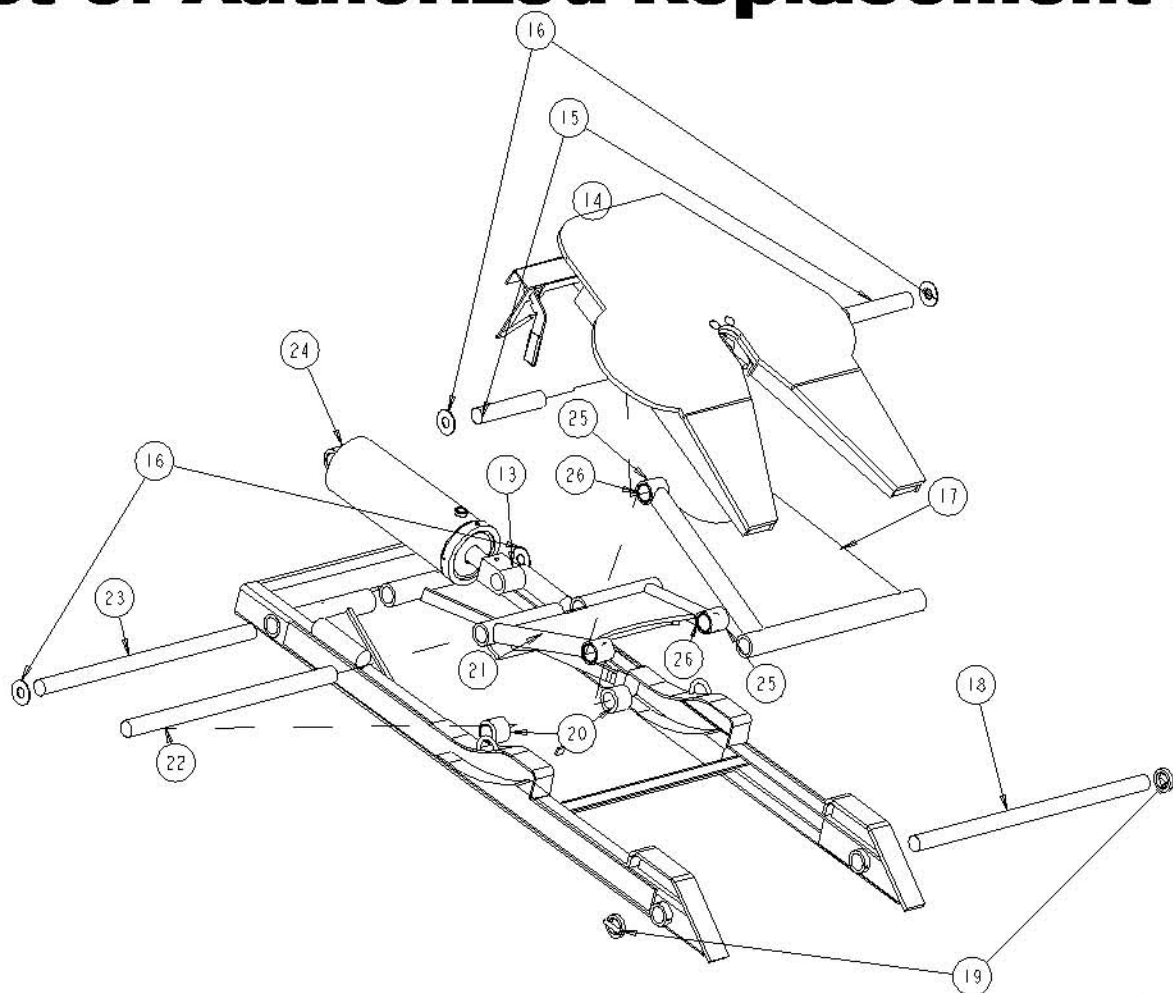

| Drawing Number | Description | Part Number |
|----------------|-------------------------------------|-------------|
| 13 | Knuckle for hydraulic cylinder | 600-80071 |
| 14 | Fifth Wheel Plate | 600-60014 |
| 15 | Fifth Wheel Shaft (2 required) | 600-60015 |
| 16 | Flat Washer (2 required) | 900-80223 |
| 17 | Rear Elevator | 600-60017 |
| 18 | Rear Cross Shaft | 600-60018 |
| 19 | Shaft Retaining Collar (2 required) | 600-60019 |
| 20 | Roller Wheel (2 required) | 600-60020 |
| 21 | Front Elevator | 600-60021 |
| 22 | Roller Shaft | 600-60022 |
| 23 | Front Cross Shaft | 600-60023 |
| 24 | Hydraulic Cylinder | 600-80002 |
| 25 | 2-3/4" Elevator Bearing Housing | 600-60026 |
| 26 | 2-3/4" Connex Elevator Bearing | 600-60027 |